


INSTALLATION INSTRUCTIONS STAIRCASE WITH GUARDRAIL

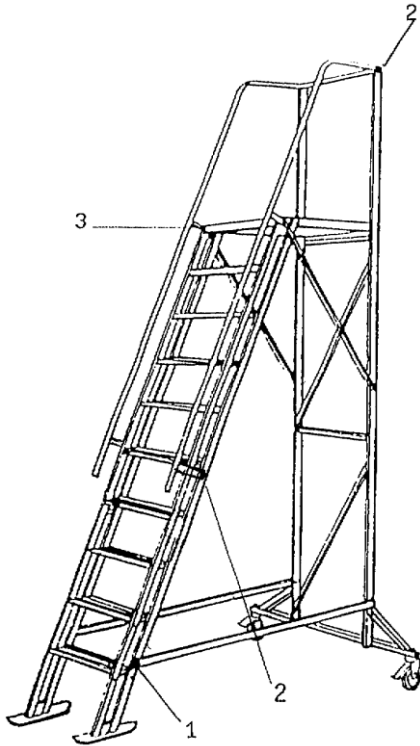

1. First remove the band at both sides.
2. Fold up the stairs and attach the lower strut in the step portion on both sides (Fig. 1).
3. Red marker shows the bolts loosened to secure the strut tube.
4. Then turn off the ladder is on the back cover back. Attach these to existing sleeve top and the red mark on the stair section (Fig. 2).
5. Attach the upper strut up with the bracket on the ladder, see red marker (Fig. 3).
6. At TML 2.40 and 3.00 also installed a cross brace. This is fastened with bolts that have red mark like other bars.
7. Do not pull down some bolts before the entire staircase is assembled and installed on a level surface, any adjustments can easily be remedied.